



Go to this link to register your product



User Manual



UPRS 1508 - 2008
1508i - 2008i

Line Interactive Sinewave UPS

Quick Guide V.


1. Product Overview

Front View:



- ❶ Input voltage
- ❷ Output voltage
- ❸ AC mode indicator
- ❹ Load level
- ❺ Overload indicator
- ❻ Battery mode indicator
- ❼ Battery level
- ❽ Low battery indicator
- ❾ Fault indicator

Back View:

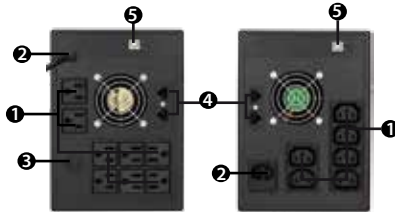


- ❶ Output receptacles
- ❷ AC input
- ❸ Circuit breaker
- ❹ Modem/Phone/Network surge protection
- ❺ USB com. port

2. Installation and Initial Startup

NOTE: Before installation, please inspect the unit. Be sure that nothing inside the package is damaged.

Placement & Storage Conditions

Install the UPS in a protected area that is free of excessive dust and has adequate air flow. Please place the UPS away from other units at least 20 cm to avoid interference. Do NOT operate the UPS where the temperature and humidity is outside the specific limits. (Please check the specs for the limitations.)

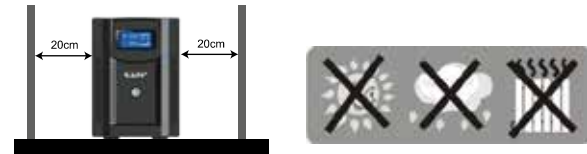

Connect to Utility and Charging

Plug in the AC input cord to the wall outlet. For the best results, suggest to charge the battery at least 6 hours before initial use. The unit charges its battery while connecting to the utility.



6 hours

Connect the Loads

Plug in the loads to output receptacles on the rear panel of the UPS. Simply turn on the power switch of UPS unit, then devices connected to the UPS will be protected by UPS unit.

Connect Modem/Phone/Network for Surge Protection

Connect a single modem/phone line into surge-protected "IN" outlet on the back panel of the UPS unit. Connect from "OUT" outlet to the computer with another phone line cable.

Connect Communication Cable

To allow for unattended UPS shutdown/start-up and status monitoring, connect the communication cable one end to the USB port and the other to the communication port of your PC. With the monitoring software installed, you can schedule UPS shutdown/start-up and monitor UPS status through PC.

Turn On/Off the Unit

Turn on the UPS unit by pressing the power switch. Turn off the UPS unit by pressing again the power switch.

3. Important Safety Warning (SAVE THESE INSTRUCTIONS)

CAUTION! To prevent the risk of fire or electric shock, install in a temperature and humidity controlled indoor area free of conductive contaminants. (See the specifications for the acceptable temperature and humidity range.)

CAUTION! To reduce the risk of overheating the UPS, do not cover the UPS' cooling vents and avoid exposing the unit to direct sunlight or installing the unit near heat emitting appliances such as space heaters or furnaces.

CAUTION! Do not attach non-computer-related items, such as medical equipment, life-support equipment, microwave ovens, or vacuum cleaners to UPS.

CAUTION! Do not plug the UPS input into its own output.

CAUTION! Do not allow liquids or any foreign object to enter the UPS. Do not place beverages or any other liquid-containing vessels on or near the unit.

CAUTION! In the event of an emergency, press the OFF button and disconnect the power cord from the AC power supply to properly disable the UPS.

CAUTION! Do not attach a power strip or surge suppressor to the UPS.

CAUTION! If the UPS is with metal chassis, for safety purpose, grounding is a must during UPS installation in order to reduce leakage current below 3.5mA.

Attention hazardous through electric shock. Also with disconnection of this unit from the mains, hazardous voltage still may be accessible through supply from battery. The battery supply should be therefore disconnected in the plus and minus pole at the quick connectors of the battery when maintenance or service work inside the UPS is necessary.

CAUTION! Servicing of batteries should be performed or supervised by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from batteries.

CAUTION! When replacing the batteries, use the same number and type of batteries.

CAUTION! Internal battery voltage is 12VDC. Sealed, lead-acid, 6-cell battery.

CAUTION! Do not dispose of batteries in a fire. The battery may explode. Do not open or mutilate the battery or batteries. Released electrolyte is harmful to the skin and eyes.

CAUTION! Unplug the UPS prior to cleaning and do not use liquid or spray detergent.

CAUTION! A battery can present a risk of electric shock and high short circuit current. The following precaution should be observed before replacing batteries:

- 1) Remove watches, rings, or other metal objects.
- 2) Use tools with insulated handles.
- 3) Wear rubber gloves and boots.
- 4) Do not lay tools or metal parts on top of batteries.
- 5) Disconnect charging source prior to connecting or disconnecting batteries terminal.

4. Software Download & Installation (Only for the model with communication port)

Please follow steps below to download and install monitoring software:

1. Go to the website <http://www.power-software-download.com>
2. Click ViewPower software icon and then choose your required OS to download the software.
3. Follow the on-screen instructions to install the software.
4. When your computer restarts, the monitoring software will appear as an orange plug icon located in the system tray, near the clock.

5. Trouble Shooting

Use the table below to solve minor problems.

Problem	Possible Cause	Solutions
No words display on the front panel even though the mains is normal.	AC input is not connected well.	Check if the input power cord is firmly connected to the mains.
	AC input is connected to the UPS output.	Plug AC input power cord to AC input correctly.
Battery backup time is shorter than nominal value.	Batteries are not fully charged.	Charge the batteries at least 6 hours and then check the capacity again. If the problem still persists, please consult your dealer.
	Batteries defect.	Contact your dealer to replace the batteries.
Warning or fault icon is shown and alarm is continuously sounding.	Fan is locked or not working.	Check fans and notify your dealer.
	The UPS is overload.	Remove some loads first. Before reconnecting devices, please verify the total loads match the UPS capability specified in the spec.
Low battery icon is shown on the LCD screen.	Low battery.	Charge the UPS at least 6 hours.

6. Specifications

Model	1.5K	2K
CAPACITY	1500VA/1050W	2000VA/1400W
INPUT		
Voltage	110/120 VAC or 220/230/240 VAC	
Voltage Range	81-145 VAC / 162-290 VAC	
OUTPUT		
Voltage Regulation	+/-10%	
Transfer Time	Typical 2-6 ms, 10 ms max.	
Waveform	Pure Sine Wave	
BATTERY		
Type & Number	12V/9Ah x 2	12V/9Ah x 2
Charging Time	6 hours recover to 90% capacity	
PHYSICAL		
Dimension (DxWxH)	397 x 146 x 205 mm	
Net Weight (kgs)	12,2	13,7
Environment		
Humidity	0-90 % RH @ 0-40°C (non-condensing)	
Noise Level	Less than 55 dB	
MANAGEMENT		
USB	Supports Windows®2000/2003/XP/Vista/2008/7, Linux, Unix, and MAC	

Notes

Lined area for notes.

CDP USA
usa@cdpups.com



CDP GUATEMALA
guatemala@cdpups.com



CDP COLOMBIA
colombia@cdpups.com



CDP HONG KONG
hongkong@cdpups.com



CDP CHINA
china@cdpups.com



CDP MÉXICO
mexico@cdpups.com



CDP COSTA RICA
costarica@cdpups.com



CDP PERÚ
peru@cdpups.com



CDP ECUADOR
ecuador@cdpups.com



CDP VENEZUELA
venezuela@cdpups.com

